

Rigid Aluminum Hulls Bottom Paint Lines


Be sure to use Copper Free Paint. See our Bottom Paint Suggestions section of the website for more info about preparing the surfaces and which paints to use.



Start from the bow, just under the welded eye in the aluminum hull and angle back to just below the first D-ring



Angle cuts back to the stern tube just before the 2nd d-Ring

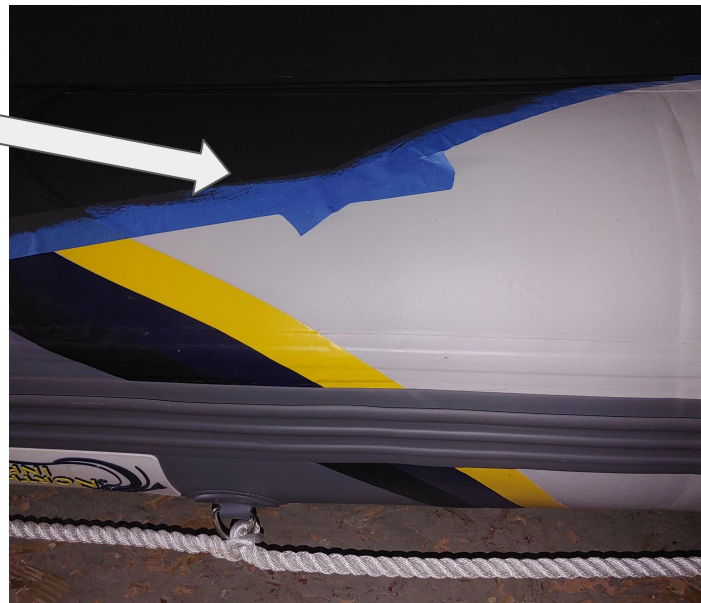

Use the Rub Rail as a guide when you reach the stern cone of the tube to paint the stern where your motor will hang. We suggest painting to just under the lifting eyes across the transom. You can use the same copper-free paint on the tubes and the aluminum hull.



